

New Construction Awning with Exterior Sheathing Removed and Brickmould

Tools:

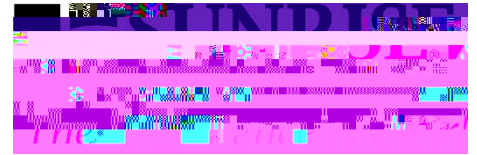


Fig. 0-1



Fig. 0-2

Supplies





Fig. 0-3

Provided by Manufacturer:



Fig. 0-4

Warnings:

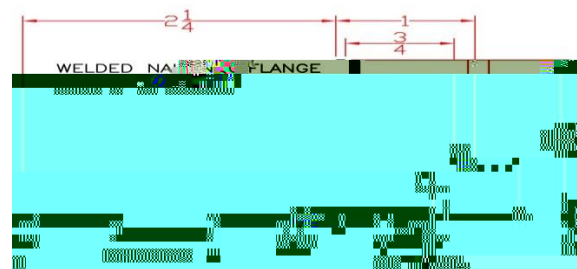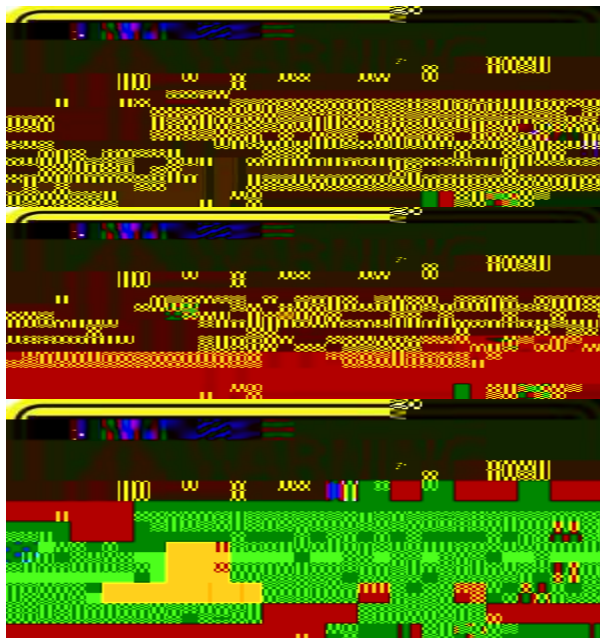

Step One:

Fig. 1-1




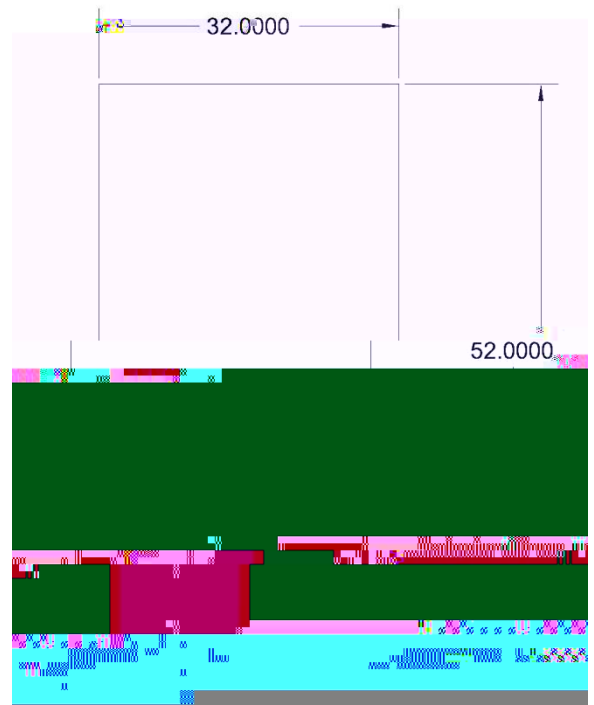



Fig. 1-2

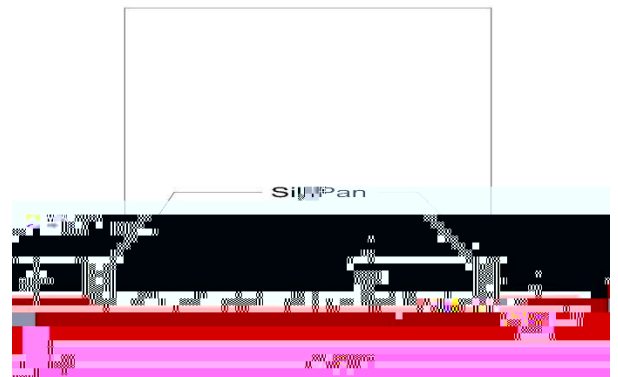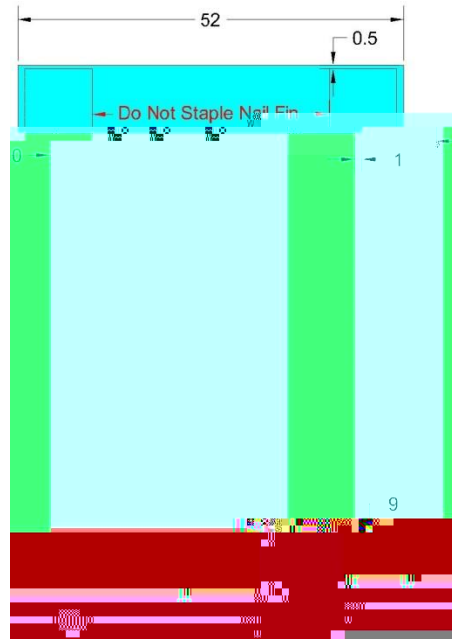

Step Two:

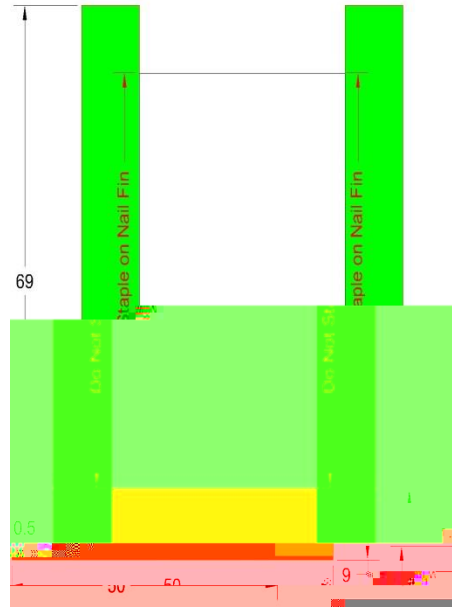

Water Barrier Steps

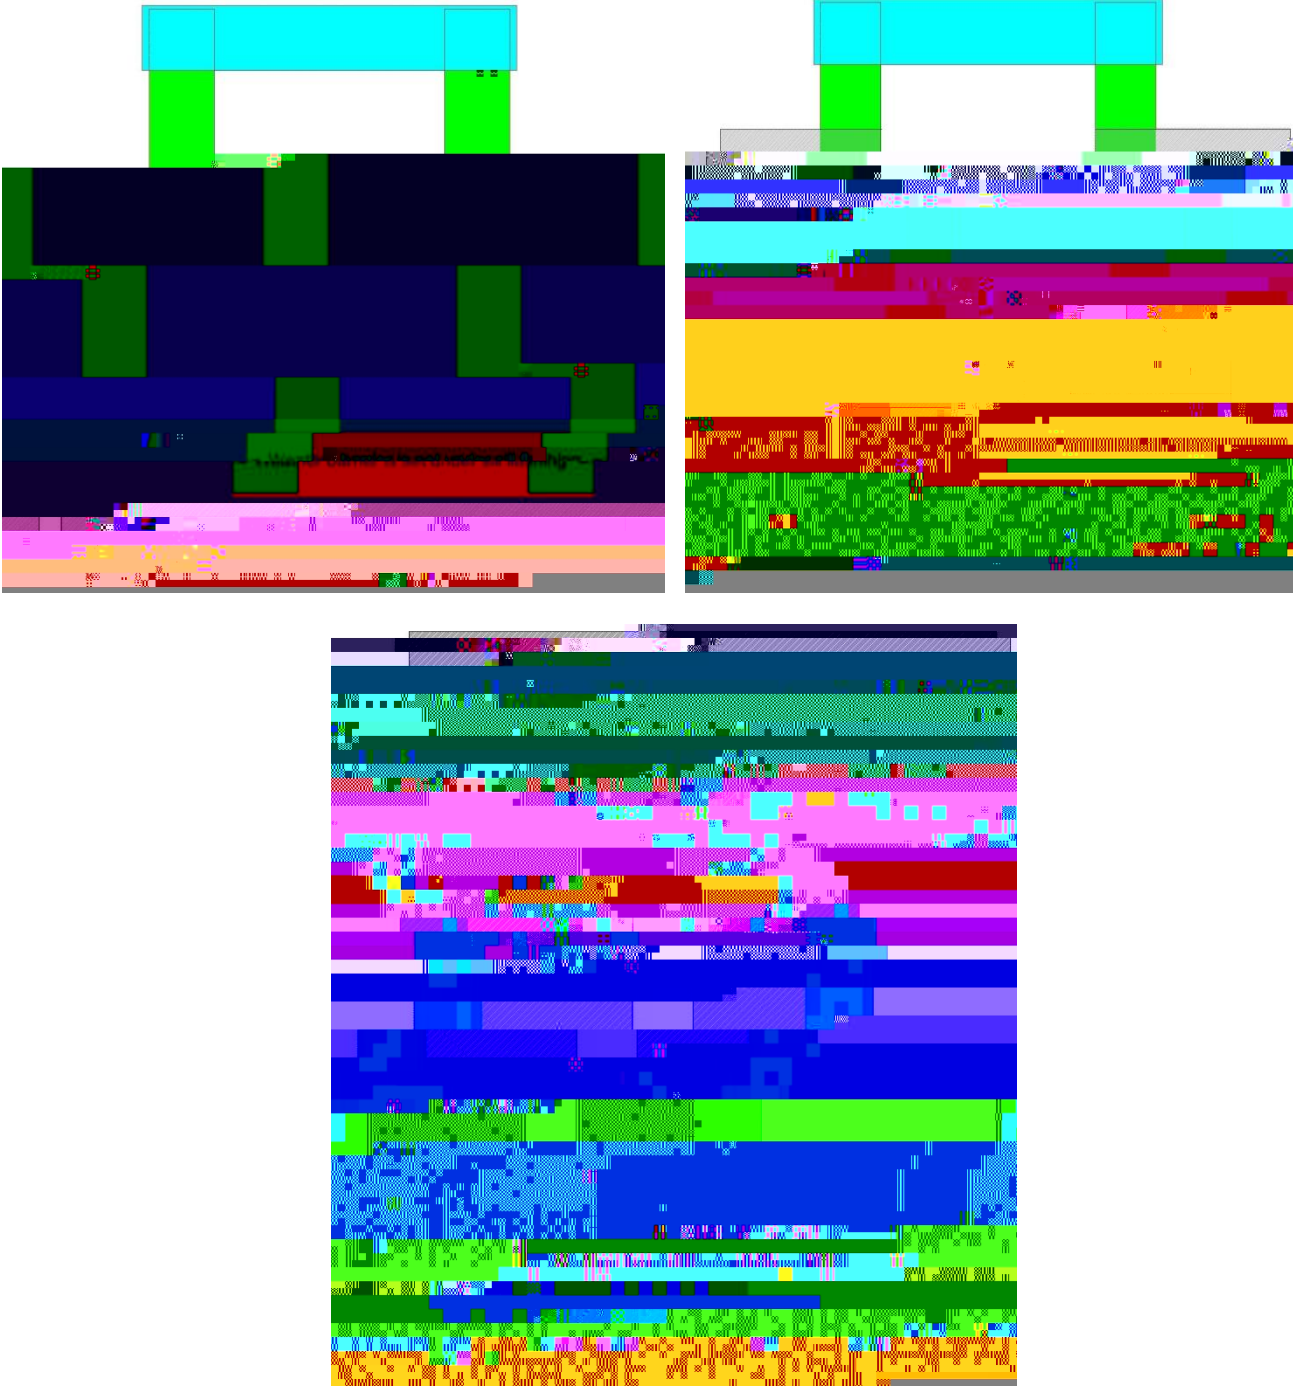

NOTE: There are many variations of install that may be encountered when replacing windows. One conventional replacement scenario is described in these instructions. For questions on appropriate installation procedures, refer to your GENERAL CONTRACTOR, LOCAL and STATE BUILDING CODES, ARCHITECTURAL SPECIFICATIONS, and ASTM E2112.